

PM2.5 / PM1.0 Sensor

Particulate Matter Sensing Solution

PSMU series

FEATURES

- → Detectable Particle Size ≥0.3

 µm
 - → Real-time PM2.5/PM1.0
- ♦ UART Output μg/m³
- **♦ Excellent Accuracy**1)
- ♦ High Linearity and Uniformity
- Market-proven Reliability and Durability



PRODUCT SUMMARY

PSMU Series is PM2.5/PM1.0 dedicated sensor providing uniform performance and excellent accuracy in weight concentration value by detecting over $0.3\mu\text{m}$ sized ultra-fine particle through **SAMYOUNG S&C**'s proprietary optical structure with IrED.

APPLICATION

- Air Solution Products
 (Air Purifier, Air Conditioner and etc.)
- HVAC Control System
- Smart IAQ Device
- Outdoor Particle Sensing Device

KEYNOTE

PSMU Series, in which **SAMYOUNG S&C**'s 20years knowledge and technology are concentrated, is a PM2.5/PM1.0 dedicated sensor with a radical improvement for detection capability at ultra-fine particle range – 0.3μm~1.0μm, which assures PM2.5/PM1.0 weight concentration values more accurate than conventional presumptive sensors.

PSMU Series which performs higher accuracy along with improved sensitivity than conventional sensors provides reliable information to users enabling more accurate and sophisticated control in the applications such as air purifiers, air conditioners and air quality measuring devices.

SAMYOUNG S&C has developed a system to reliably mass-produce PSMU Series of uniform performance by a mass calibration technology which also contributes to efficient production. Moreover, the patented aerodynamic optical structure maximizes the performance of the sensor and improved the quality of the product. In addition, it provides real-time PM2.5/PM1.0 weight concentration values in UART output for user convenience.

¹⁾ see page 2. Specifications




1. Product Specifications

Ta=25°C

Parameter	Index	
Detectable Size	≥0.3µm	
Effective Range	0~500μg/m²	
Maximum Range	0~900μg/m²	
Accuracy	±25%@100~500µg/m³	
Accuracy	±25μg@0~100μg/m³	
Time for Initial Stabilization	60sec. after powered on	
Response Time	1sec	
Supply Voltage	DC5.0V±10% Ripple 30mV or Less	
Current Consumption	otion Typ. 85mA	
Output Signal	UART	
Operating Temperature	-10~65°C	
Operating Humidity	<95%RH(Non-Condensing)	
Storage Temperature	-20~80°C	
Storage Humidity	<95%RH(Non-Condensing)	
Dimensions	59 x 45 x 17mm (W x H x D)	
Light Source Life Time	Min. 5years	
Weight 25g		

2. Pin Map

Pin No.	Name	Description	
1	GND	Ground	
2	RX	Not Used (N.C)	
3	VCC	DC 5V	
4	TX	UART Tx	
5	OPT	Not Used (N.C)	

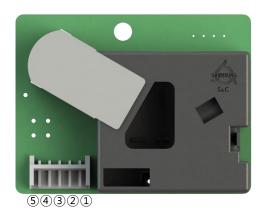



3. Output Characteristics

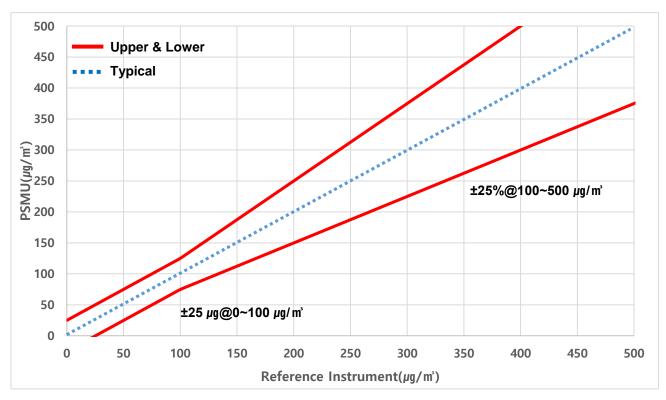


Figure 1. Output Characteristics

*see 4. Standard Measurement Method for referential testing method

4. Standard Measurement Method

• Room Chamber : 27 m³ @23±5°C, 50%RH

Particle Source : Cigarette

Reference Instrument : GRIMM 11-A

Particle Saturation Time : 5mins

Measurement Time : 60mins

Sensor Placement : Center of Room Chamber

Spray cigarette smoke in room chamber; and measure weight concentration of the airborne particles while slowly purifying the air inside the chamber through HEPA filter.

5. Internal Schematic

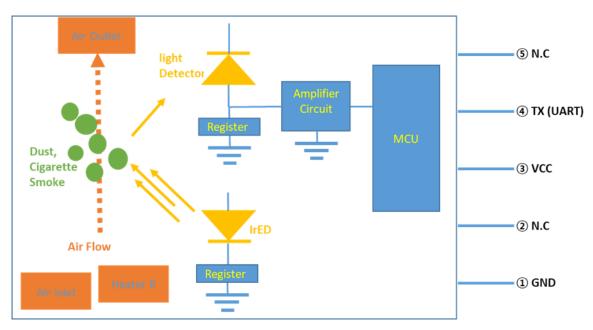


Figure 2. Example of Internal Schematic

6. I/O Connector Specifications

Pin No.	Name	Description	Remark
1	GND	Ground	Ground
2	RX	Not Used (N.C)	Not Connected
3	VCC	DC 5V	Input Voltage
4	TX	UART Tx	PM2.5 Output
5	OPT	Not Used (N.C)	Not Connected

7. Connector Description (Male/Female)

Model Name	Part No.		Description	Connector Maker
PSMU	Wafer	S5B-EH-2.5	2.5mm pitch	101
	Housing	EHR-5	2.5mm pitch	JST



8. Interface Circuit

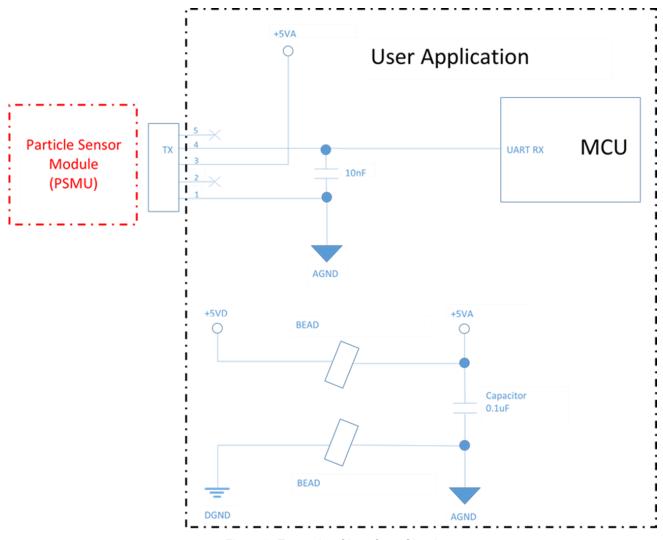


Figure 3. Example of Interface Circuit

*Please use an extra power regulator and/or a bypass capacitor(below 10nF) on the signal line in order to compensate noise if there is noise on the signal, or power line and/or signal line are longer than 50cm



9. Output Signal (Tx)

9-1. UART Setup

Properties	Value
Baud Rate	9600 bps
Data Bit	8
Parity Bit	None
Stop Bit	1

9-2. Message Format

Format	"ug: <dummy>,<pm2.5>\n"</pm2.5></dummy>
Example	"ug:0,25\n"

10. Particle Concentration Calculation

Particle Concentration(μ g/m³) = (D₁+D₂+D₃+...+D_N)/N

Example:

Particle Concentration($\mu g/m^3$) for N sec. = (2+0+10+...+26)/N



11. Dimensions

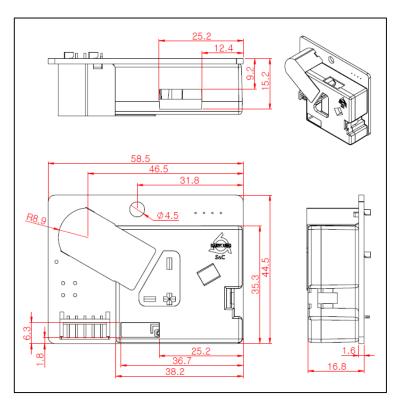



Figure 4. Dimensions


12. Ordering Information

Туре	Part No.	Contact Info.		
PM2.5	PSMU2.5	E-MAIL	sales@samyoungsnc.com	
PM1.0	PSMU1.0	PHONE	+ 82 31 780-9900	

13. Packaging Information

Tray: 25pcs / 1 Tray (PS, 365×300×25mm) Out Box (KBL3SK, 380×320×255mm): 10 Trays (250pcs, 7.85kg)

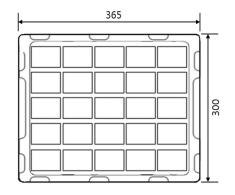

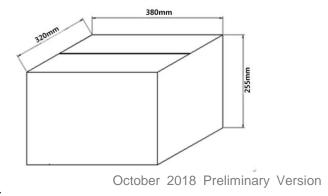

7



14. Revision History

Date	Version	Page	Change
2018.10.31	Preliminary	All	First Edition





This publication is the proprietary product of **SAMYOUNG S&C** and is copyrighted, with all rights reserved. Under the copyright laws, no part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, in whole or in part, without the express written permission of **SAMYOUNG S&C**. Express written permission is also required before a third party may make any use of this publication.

SAMYOUNG S&C Co., Ltd.

446, Dunchon-daero, Jungwon-gu, Seongnam-city, Gyeonggi-do, 13229 KOREA

Phone: + 82 31 780-9900 Fax: + 82 31 741-1821

Homepage: www.samyoungsnc.com
E-mail:
sales@samyoungsnc.com

This datasheet should be used only for intended and authorized application of PSMU Series. Please consult with **SAMYOUNG S&C** for any specific application requirements.

Copyright 2018[©], **SAMYOUNG S&C**