
DATA SHEET Zirconia O₂ Sensors Oxygen Measurement System

- Fast response zirconium dioxide (ZrO₂) sensor in conjunction with the OXY-LC oxygen sensor interface board
- Long life, non-depleting technology
- Integral heating element
- High accuracy
- Linear output signal



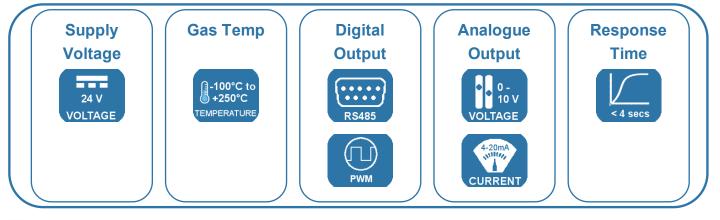

BENEFITS

- No reference gas required
- No need for temperature stabilisation
- Variety of probe mounting positions available; 28mm, 45mm & 55mm
- M18x1.5 screw mounting

X TECHNICAL SPECIFICATIONS

| Supply voltage | |
|--|---|
| RS485 output variant: | 8-28V _{DC} |
| Analogue output variants: | 20-28V _{DC} |
| Supply current | 600mA max. at $24V_{DC}$ |
| | 1.2A max. at 12V _{DC} |
| Digital output | RS485 (Modbus RTU) |
| Analogue output | 4—20mA; load 600Ω max |
| or | 0—10V _{DC} ; load 10k Ω min |
| Pump impedance at 700°C ¹ | < 6kΩ |
| Permissible gas temperature | -100°C to +250°C |
| Gas flow rate ² | 0—10m/s |
| Operating pressure limits ³ | 260—1260mbar absolute |
| Mounting thread | M18 x 1.5 |

OUTPUT VALUES

| Oxygen range (analogue output) or | 0.1—25% O ₂ 0.1—100% O ₂ |
|---|---|
| Oxygen range (Modbus RTU) | 0.1—100% O ₂ |
| Accuracy after calibration | 0.5% O ₂ |
| Accuracy after calibration | 0.5% O ₂ |
| Output resolution | 0.01% O ₂ |
| Response time (10—90% step) | < 4s |
| Initial warm up time (till stable output) | 5—10mins |
| Output inactive start up delay (heater warm | up) |
| From OFF to ON mode: | 60s |
| From Standby to ON mode (RS485 only): | 20s |

Need help? Ask the expert Tel: + 44 (0)1236 459 020 and ask for "Technical"





The constant current source used in the pump circuit should be designed to drive a load of up to $6k\Omega$. With baffle fitted to shield the sensor from direct cooling and pollution by the flue gas; refer to DS0122 ZrO₂ Screw Fit Probe Datasheet for fitment details.

) Sensor and interface for correct barometric pressure compensation.

The Oxygen Measurement System is a complete solution consisting of a zirconium dioxide oxygen sensor and interface PCB. Dimensional overview given below; full specifications for each, including complete outline drawing and electrical interface details can be found:


- DS0122 ZrO₂ Screw Fit Probe Datasheet
- DS0058 OXY-LC Oxygen Sensor Interface Datasheet

Contact technical@sstsensing.com for details.

Interface Board layout


k k

Always handle the interface board using the correct ESD handling precautions.

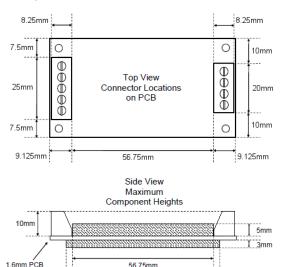

Sensor layout

Thickness

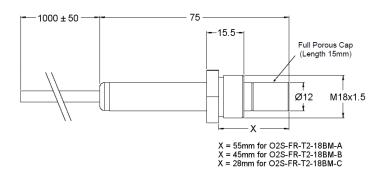

62mm Area with Components

Do not exceed maximum ratings and ensure sensor(s) are operated in accordance with their requirements.

Carefully follow all wiring instructions. Incorrect wiring can cause permanent damage to the device.

Zirconium dioxide sensors are damaged by the presence of silicone. Vapours (organic silicone compounds) from RTV rubbers and sealants are known to poison oxygen sensors and MUST be avoided. Do NOT use chemical cleaning agents.

Failure to comply with these instructions may result in product damage.

Referring to the tables below will allow you to tailor a system to suit your specific requirements.

For example: Ordering part numbers *OXY-LC-A25-455* and *O2S-FR-T2-18BM-C* will create a system that has a 4—20mA analogue output from the board and a sensor probe that has a length of 28mm from the sensor tip to the beginning of the M18x1.5 screw mount.

Interface Board

| PCB Part Number | O₂ Measure Range | Output Type | Heater Voltage |
|--------------------|------------------------|---------------------------------|-------------------|
| OXY-LC-485 | 0.1% and 100% | Modbus RTU | Configurable |
| OXY-LC-A25-455 | 0.1 to 25% | Current: 4—20mA | $4.55V_{DC}$ |
| OXY-LC-V25-455 | 0.1 to 25% | Voltage: 0—10V _{DC} | $4.55V_{DC}$ |
| OXY-LC-A100-455 | 0.1 to 100% | Current: 4—20mA | $4.55V_{DC}$ |
| OXY-LC-V100-455 | 0.1 to 100% | Voltage: 0—10V _{DC} | $4.55V_{DC}$ |

Sensor

| Sensor Part Number | Probe Length |
|--------------------|--------------|
| O2S-FR-T2-18BM-A | 55mm |
| O2S-FR-T2-18BM-B | 45mm |
| O2S-FR-T2-18BM-C | 28mm |

As customer applications are outside of SST Sensing Ltd.'s control, the information provided is given without legal responsibility. Customers should test under their own conditions to ensure that the equipment is suitable for their intended application.

For detailed information on the sensor operation refer to application note AN0043 Operating Principle and Construction of Zirconium Dioxide Oxygen Sensors.

ISweek www.isweek.com

Add: 16/F, Bldg. #3, Zhongke Mansion, No.1 Hi-Tech S. Rd, Hi-Tech Park South, Shenzhen, Guangdong, 518067 P.R.China